

### TALENT I MASTER INSTRUCTIONS




The Talent I Master LED Controller includes an easy to use remote control to adjust brightness, white balance and playback speed, and it's exterior pre-set buttons allow for fast and simple programming. Highly energy efficient, and designed with four true-color tones, the Talent I Master Controller is compatible with a wide variety of different lamp types (including DMX512 lamps). Supporting 32G with it's SD card storage, the Talent I Master allows you to preset and save up to 255 program files. It's convenient self-testing function allows the customer to preview their selected settings and easily make any needed changes before applying the finalized design to their project.


### SPECIFICATIONS

Rated Voltage	AC 100V~240V
Rated power	15W
Size	283MM*134MM*45MM
Spacing between Attachment Holes	268MM; 68 MM
Standard Accessories	Remote control SD card AC power cord

### MASTER SIZE

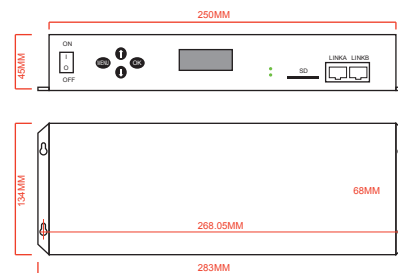

### MASTER FRONT VIEW

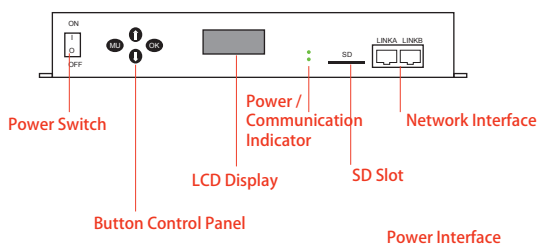


### MASTER REAR VIEW



### MASTER Button Control Panel



### MASTER Remote Control Button Definition

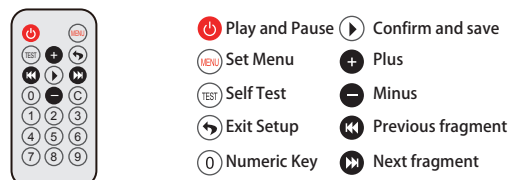

### LCD DISPLAY & REMOTE CONTROL INSTRUCTIONS

#### 1. TALENT I MASTER: LCD Main Screen (after boot)

MR- BF 12B	← Controller name
PLAY 001	← Program Fragment Number Currently Playing

#### 2. TALENT I MASTER: Parameter Settings

a). In the main menu of the Talent I Master, press **Ⓜ** to enter the settings screen. As shown below:

INDEX	← Catalog
=LOOP	← Loop play(When the number is displayed is the selected fragment number)

In this menu, select **⏪ ⏩** to adjust the loop mode or to switch to digital mode.

Select **+** **-** to adjust the program serial number.

Select **⏵** to save and exit, or select **⏴** to exit without saving.

b). Select **Ⓜ** to enter the playback speed selection menu. As shown below:

SPEED	← Playback Speed
=25FPS	← Frame Count/ per Second

In this menu, select **+** **-** to set playback speed. Select **⏵** to save and exit, or select **⏴** to exit without saving.

c) Select **Ⓜ** to enter and save the date and time. As shown below:

2015	← Year	2015	← Time
--01 --08	← Month -- Day	--01 --08	← Hour-- Minute-- Second

In this menu, select **⏪ ⏩** to move to next location, select **+** **-** to adjust the numerical value. Select **⏵** to save and exit, or select **⏴** to exit without saving.

d) Select **Ⓜ** again to enter and adjust the brightness settings. See example below:

BRIGHT	← Brightness
=100%	← Brightness Percentage

In the menu, press **+** **-** to set brightness.

Select **⏪ ⏩** to adjust the channel positions of A, B, C, or D, select **+** **-** again to set up the required brightness of the four channels.

Select **⏵** to save and exit, or select **⏴** to exit without saving.

e) Select **Ⓜ** again to enter control the individual brightness of channels A, B, C, or D As shown below:

COLOR A	← Channel A Brightness	COLOR B	← Channel B Brightness
=100%	← Brightness Percentage	=100%	← Brightness Percentage
COLOR C	← Channel C Brightness	COLOR D	← Channel D Brightness
=100%	← Brightness Percentage	=100%	← Brightness Percentage

In the menu, select **+** **-** to set your desired brightness, then select **⏵** to save and exit. Select **⏴** to exit without saving.

f) Select **Ⓜ** to enter the sub-controller ID Number, and to select fixed Number. See description below:

Fix ID	← ID NO.
001 → 001	← Fixed NO.

o change the number positions, you can select **⏪ ⏩** in the menu, or easily use the numeric keys to modify the order.

The first number refers to the initial controllers number. The last number refers to last controller number.

After you have chosen and selected your preferred numbers, select the **⏵** key to save your sub-controller ID number.


g) To Clear your set numbers in the sub-controller menu, select **Ⓜ**. See below:

Fix ID	← ID NO.
CLEAR	← Clear

In this menu, select **⏵** to clear and reset all the sub-controller ID numbers in the Master Controller.

### 3. TALENT I MASTER: Testing your Design

In the Talent I Master's main menu, select ( ) to Self-Test your selections. As shown below:

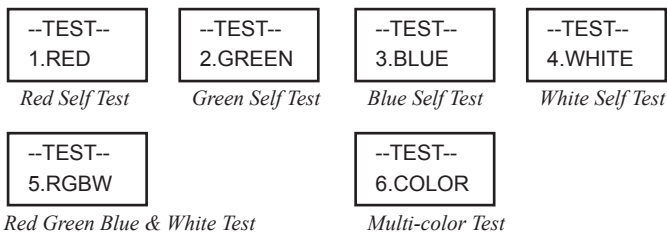


Note: During Self-Test Mode, select (TEST) to shift to various self-testing modes.

### 4. Talent I Master: Key Setting Parameter




 a) In the Talent I Master main menu, select (MU) enter the fragment section menu. As shown below:




In this menu select (↑) (↓) to change the program numbers and adjust the loop mode. Select (OK) to save and exit.

 b) Select (MU) to setup desired Playback speed:




In this menu select (↑) (↓) to set Playback speed. Select (OK) to save and exit.

 c) Select (MU) to enter and adjust the brightness settings. See below:



Select (↑) (↓) to select the Date and Time. Select (OK) to save and exit.

d) Select (MU) to adjust the brightness in channels A, B, C, and D.

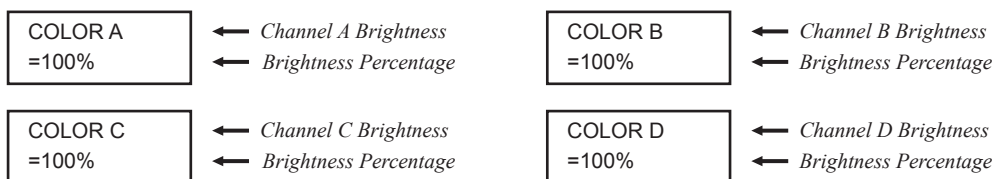

In the menu, select (↑) (↓) to adjust the brightness for each individual channel. Select (OK) to save and exit.

### 5. Talent I Master: Remote Control Operations

a) Turning off the 'Play mode' in the Master Controller:

Press the power button (⏻) to power down the screen.

b) Pause 'Play' in Master Controller:

In the Talent I Master Play menu, select (⏸) to pause the LCD screen display.

c) Adjusting the Program Segment:

When playing a segment, select the (↑) or (↓) button, or use the Remote Control to select (⏮) (⏭).

d) Adjusting Current Time to the Master Controller:

In the Talent I Master Play menu, select (⌚). You will see the current time on the LCD screen.

To continue to the main menu select (⏪). To re-set, please refer to Part 2, section C.